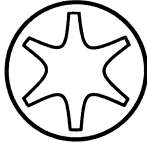
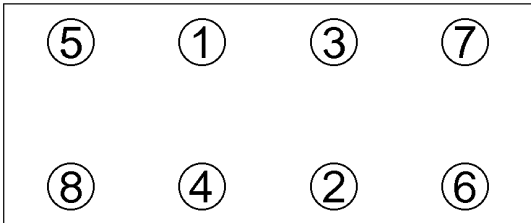


Anziehvorschrift für Zylinderkopf		297.871	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Porsche		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 966.140 M11 x 1,5 x 140				
Anziehen/ Tightening/ Serrage/ Apriete		* ☐ ➤	30 Nm 50 Nm 720° 30 Nm 110°	
Zeichenerklärung / Explanations / Explication / Explicacion				
	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
3,0/3,6 V6 / Cyl. 1-3				
Mot. MCU.RA / MCX.ZA				
MCW.DA / MCW.FA				
309/324 KW (420/441 PS)				
Cayenne / Panamera / Macan				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*297.871*	